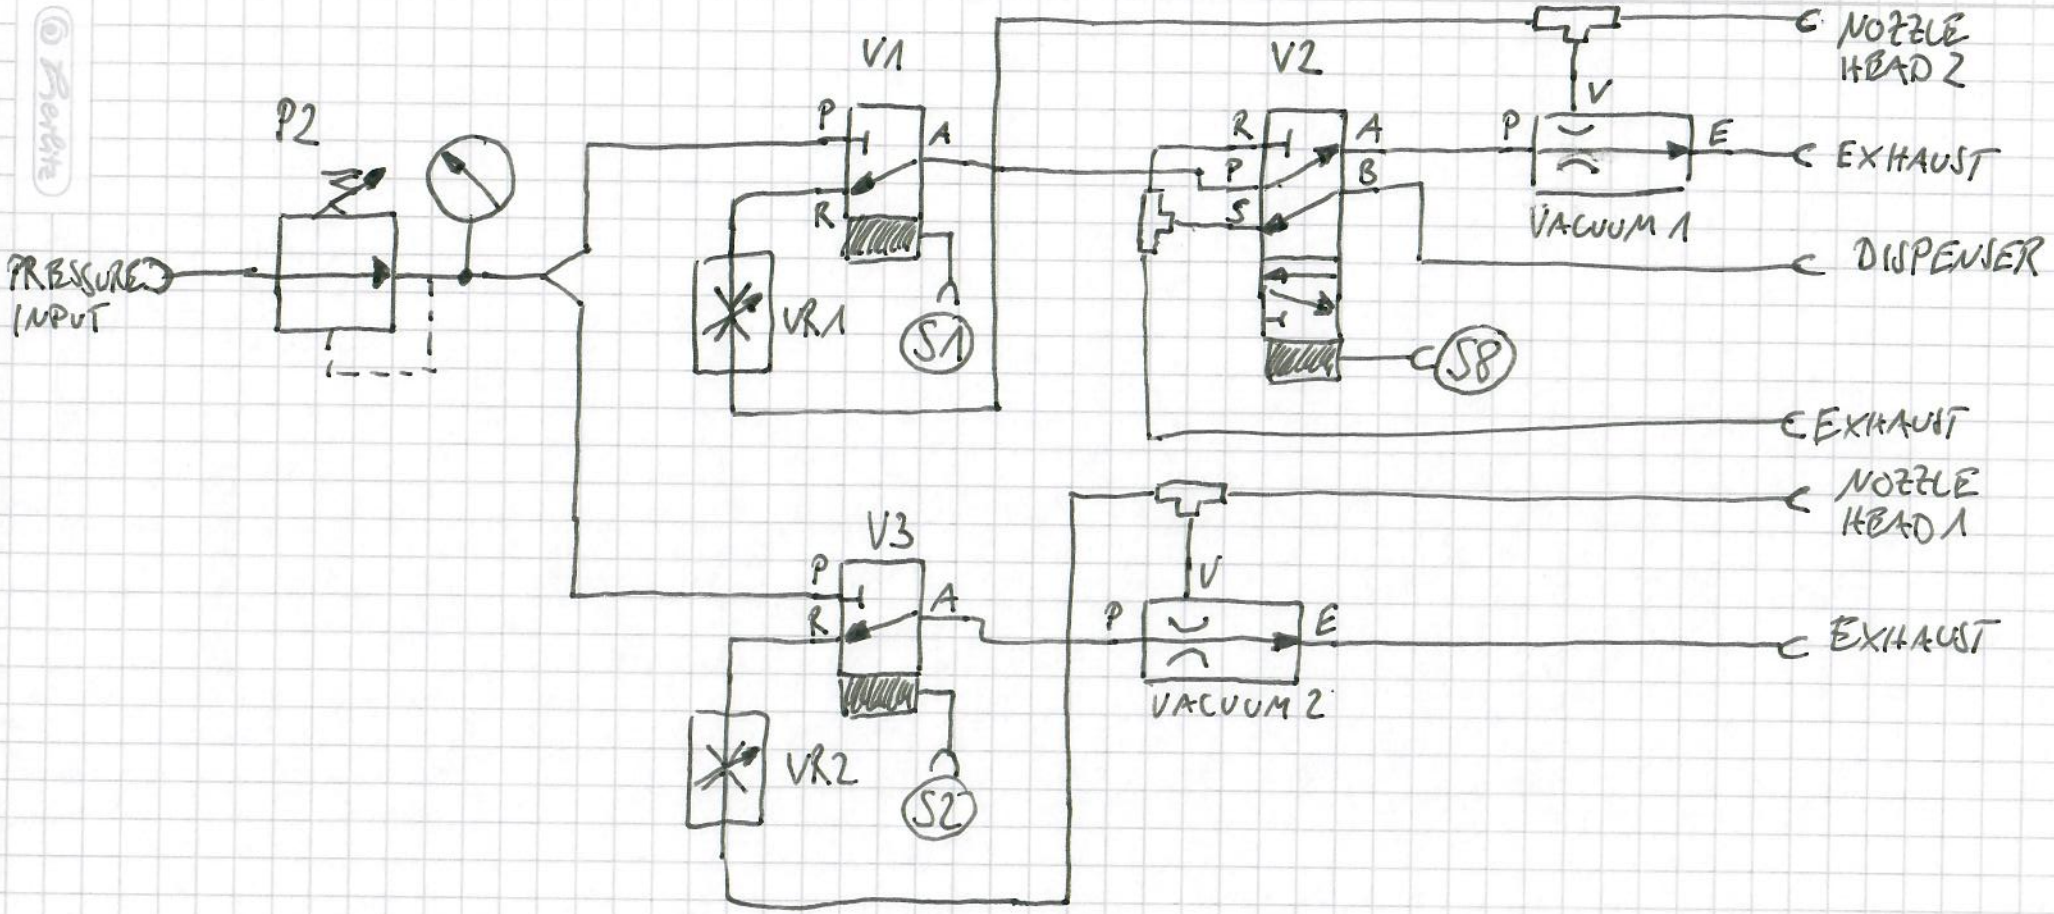
PRESSURE INPUT
P2
V1
P
A
R
VR1
S1
V2
R
A
P
B
S
H
S8
V
P
E
VACUUM 1
NOZZLE HEAD 2
EXHAUST
DISPENSER
EXHAUST
V3
P
R
A
VR2
S2
V
P
E
VACUUM 2
NOZZLE HEAD 1
EXHAUST